








Item No.	PUMP Part No.	Description	
1	F8-01	Handle	
2	F8-02	Bolt 1/2x31mm	
15	F20-100	Cable Entry Gland	
24	F8-24	Screw M5x16mm 316SS	
24A	F8-24A	Washer M5	
26.1	F8-26.1	Lead Through	
28	F8-28	Lid	
29	F8-29	Upper Bearing Housing	
31	F8-31	Stud 1/2 x 70mm	
32	F8-32	Nut 1/2	
33	F8-33	Washer Flat M12	
37	F8-37	Outer Casing	
39	F8-39	Bolt 3/8 x 3/4	
45	F8-45	Stud 1/2 x 60mm	

32	F8-32	Nut 1/2	
33	F8-33	Washer Flat M12	
37	F8-37	Outer Casing	
39	F8-39	Bolt 3/8 x 3/4	
45	F8-45	Stud 1/2 x 60mm	
55	F8-55	Bearing Upper	
56	F8-56	Stator Housing	
57	F8-57N	Rotor New	
57	F8-57R	Rotor Reshaft	
58	F8-58N	Stator New 1000v	
58	F8-58R	Stator Rewind 415v or 1000v	
58	FC8-58	Stator Clean and Bake	
59	F8-59	Bearing Cover	
60	F8-60	Bolt 1/4 x 1/2	
61	F8-61	Stud 1/2 x 50mm	

64	F8-64	Washer Bearing Support	
65	F8-65	Bearing Lower	
67	F8-67	Circlip	
68	F8-68	Rotor Key	
82	F8-82	Lower Bearing Housing	
84	F8-84	Oil Housing	
86	F8-86PC	Strainer	
96	F8-96	Shim 0.2mm	
96	F8-96A	Shim 1.5mm	
97	F8-97	Impeller nut	
100	F8-100	Inspection Bung	
102	F8-102	Mech Seal Kit	
106	F8-106	Stud 1/2 x150mm	
116	F8-116	Diffuser Ring	
117	F8-117	Screw Cap 1/4x1/2	

119	F8-119	Upper Impeller	
120	F8-120	Lower Impeller	
121	F8-121	Suction Cover	
123	F8-123	Shim 0.3mm	
123a	F8-123A	Shim 0.5mm	
127	F8-127	Diffuser Disc	
800	F8-800	O-ring Kit	
900	F8-900	Basic Repair Kit	